

*** IMPORTANT INFORMATION ***

BEFORE YOU START

Installation should be performed by a competent person only. This product could be dangerous if incorrectly installed.

Check the pack to ensure all of the components are included.

When you are ready to start, make sure that you have all of the correct tools to hand, have plenty of space, and that the area for building is clean and dry.


Do not rush! Read these instructions first and run through the sequence before you begin. Assembly should be carried out in the steps shown in the following diagrams, constructing one unit at a time and keeping fittings together to avoid loss. Lay large panels on the floor using the packaging for protection. Do not overtighten screws, as this may damage the cabinet.


If any items are missing, or problems arise with fitting, please call the **Manufacturers' Helpline on 01769 575500**.


To clean - use mild soap and water only.


Do not use abrasive cleaners.


HARDWARE:


8 x **A**  15mm

8 x **B** 

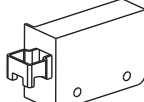
8 x **C** 

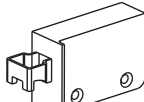
2 x **F**  30mm

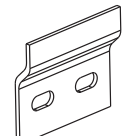
4 x **G**  50mm


 **Please use scissors to open the bag of fittings and then empty the contents into a bowl, so that they do not get lost!**

WALL FIXINGS:


1 x **M** 




1 x **N** 


2 x **P** 


4 x **E**  25mm

MINIMUM TOOLS REQUIRED:


 **CROSS HEAD SCREWDRIVER**


   **DRILL & DRILL BITS (3mm & 5mm)**


 **HAMMER**


 **SPIRIT LEVEL**

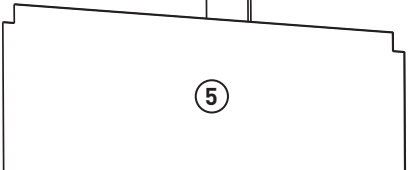
PANELS:

 **1**

 **2**

 **3**

 **4**

 **5**

2 x **1** End Panel

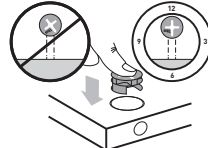
1 x **2** Top Panel

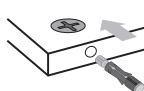
1 x **3** Base Panel

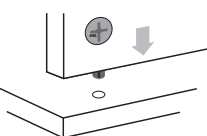
1 x **4** Vertical Back Rail

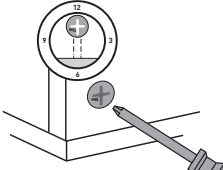
1 x **5** Back Panel

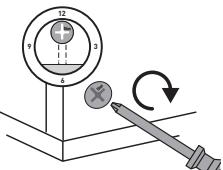
IMPORTANT: CAM FITTING AND LOCKING:

 Press in **A** firmly.

 Fully insert **B**.

 Leave no gaps.

 Turn **A** clockwise.

 Turn to 2 o'clock to lock.

STEP 1:

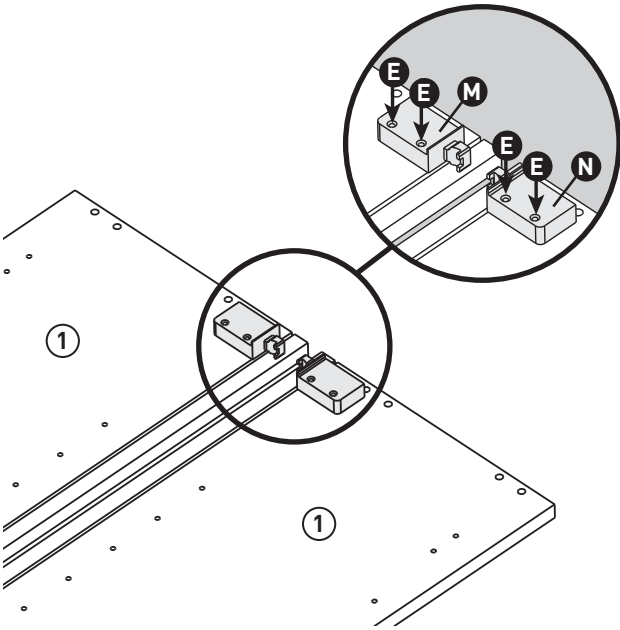
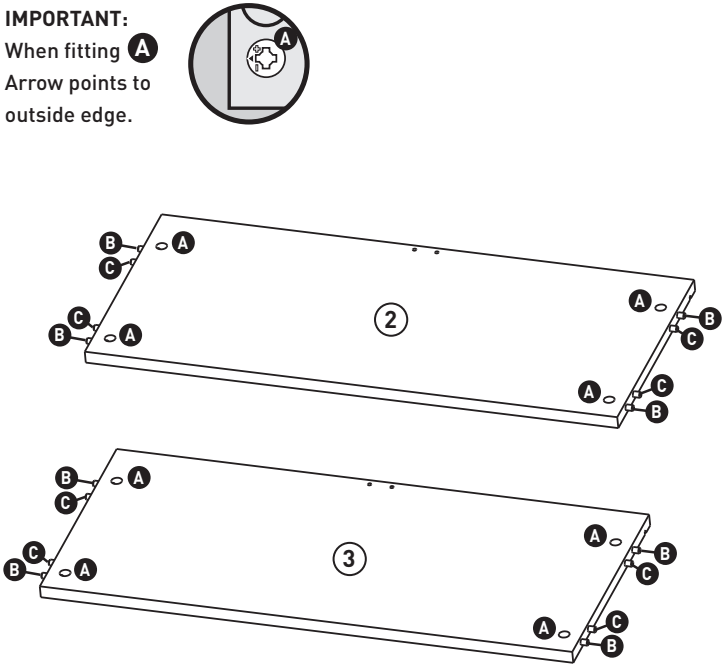
Insert **A** into panels **2** and **3**, as shown.

Then insert **B** and **C** into these panels as shown.

IMPORTANT:

When fitting **A**

Arrow points to outside edge.

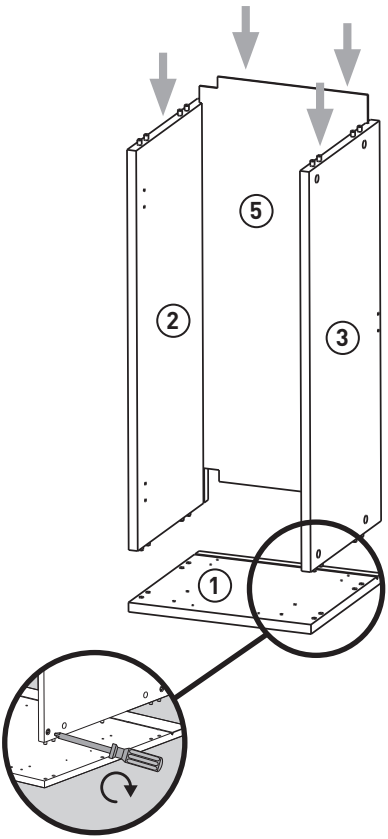


Attach the LH wall hanging bracket **M** and RH wall hanging bracket **N** to both panels **1**, in the pre-marked positions, using screws **E**.

STEP 2:

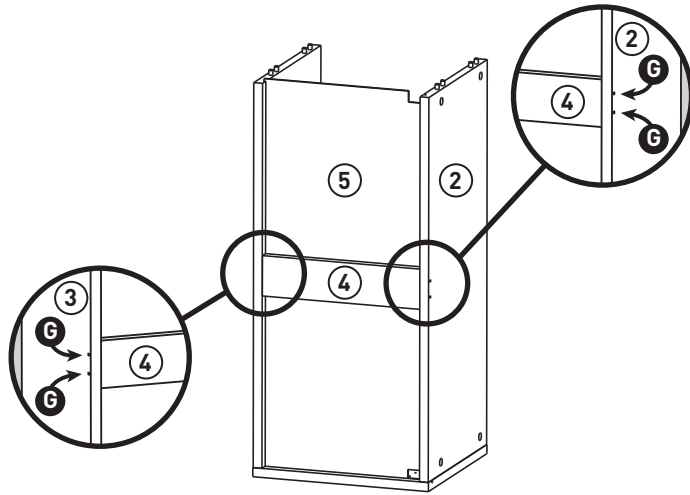
Fit panels **2** and **3** to panel **1**. Tighten the cams as you go (refer to cam fitting and locking section above).

Then carefully slide panel **5** into the grooves.



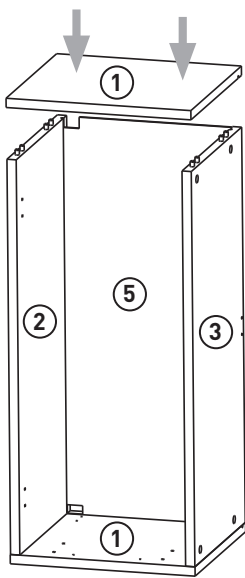
STEP 3:

Fit panel **4** to panels **2** and **3** using 4 x screws **G**.

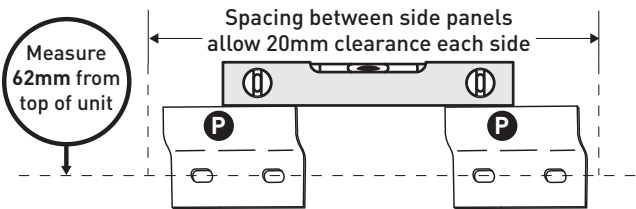


STEP 3:

Fit panel ① to panels ② and ③, as shown, and tighten cams.



FIXING TO WALL

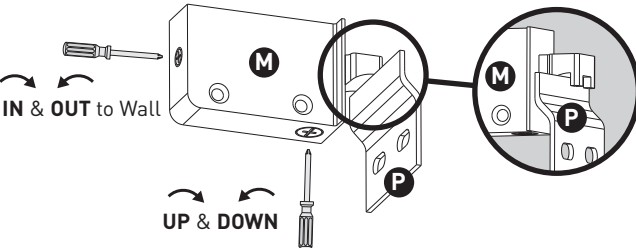


Position and secure fitting brackets **P** to the wall with suitable fixings.

WARNING: There is a danger of this cabinet falling off the wall if incorrectly fitted.

(Fixings are not supplied with the pack as they vary according to the type of walls you have. If you are unsure, ask an expert).

Hang the cabinet onto the wall brackets **P**, ensuring that the hooks are fully engaged behind the brackets, as shown. (Pulling the fitted cabinet towards yourself, whilst supporting its weight, will confirm this has been achieved).

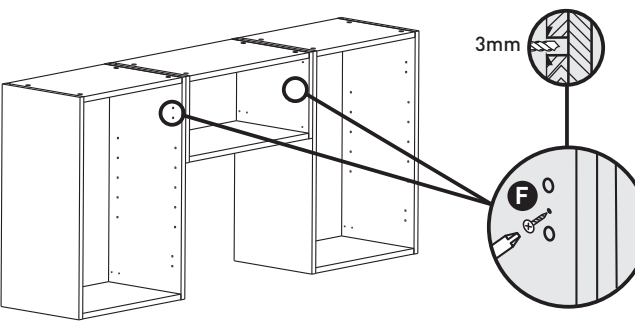


Ensure the front face of the unit is vertical by using a spirit level.

JOINING & LEVELLING

Mark 20mm on a 3mm dia. drill bit with masking tape. Drill between the 2 holes drilled for the hinges, through one cabinet side into the next, stopping when you reach the marker.

Join the cabinets together with 2 x **F** screws.



NOTES: