# STANDARD & TALL DRESSER WALL CABINETS

2 x (5) Shelf

2 x (6) Back Panel

# \*\*\* IMPORTANT INFORMATION \*\*\* BEFORE YOU START

Installation should be performed by a competent person only. This product could be dangerous if incorrectly installed.

Check the pack to ensure all of the components are included.


When you are ready to start, make sure that you have all of the correct tools to hand, have plenty of space, and that the area for building is clean and dry.

Do not rush! Read these instructions first and run through the sequence before you begin. Assembly should be carried out in the steps shown in the following diagrams, constructing one unit at a time and keeping fittings together to avoid loss. Lay large panels on the floor using the packaging for protection. Do not overtighten screws, as this may damage the cabinet.

If any items are missing, or problems arise with fitting, please call the **Manufacturers' Helpline on 01769 575500.** 

To clean - use mild soap and water only.

Do not use abrasive cleaners.

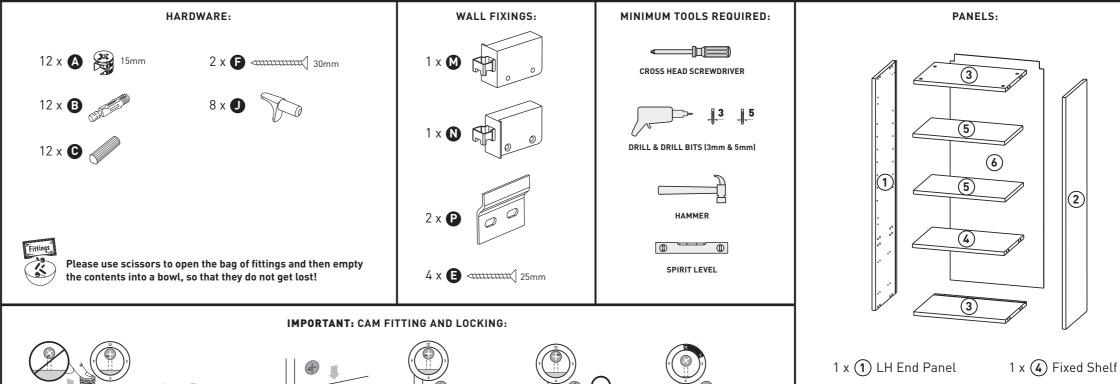

Turn A clockwise.


#### STEP 1:


Insert  $\triangle$  into panels  $\bigcirc$  and  $\bigcirc$  as shown.

Then insert **B** and **C** into panels as shown.





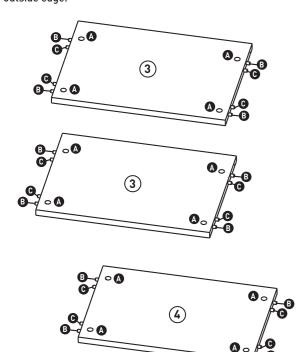

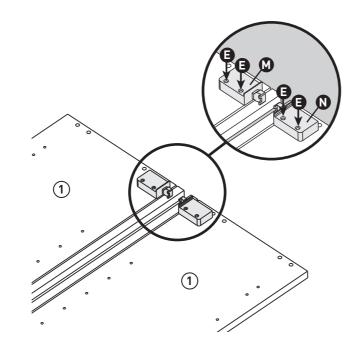


Fully insert **B**.

Leave no gaps.

Press in A firmly.

Attach the LH wall hanging bracket M and RH wall hanging bracket N to both panels 1, in the pre-marked positions, using screws E.


#### STEP 2:

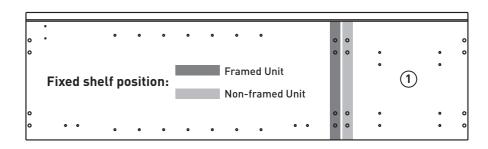

Turn to 2 o'clock to lock.

1 x (2) RH End Panel


2 x (3) Top & Base Panel

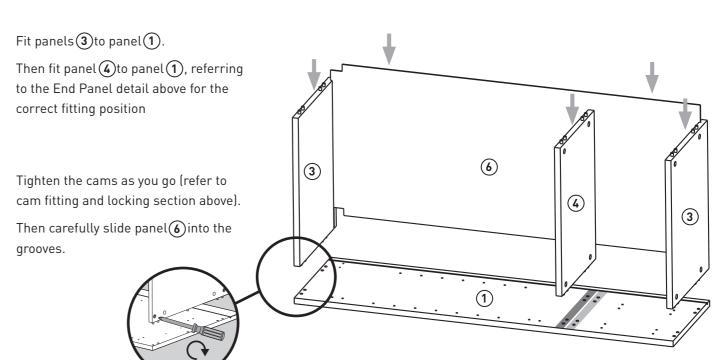


# **STANDARD & TALL DRESSER WALL CABINETS**

#### **STEP 3:**

Fit panel (2) to panels (3) and (4), and tighten cams.

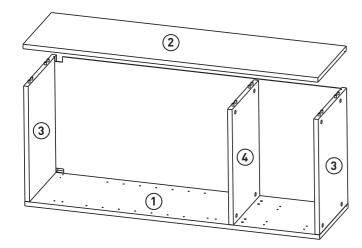

## **FIXING TO WALL**




Position and secure fitting brackets **P** to the wall with suitable fixings.



WARNING: There is a danger of this cabinet falling off the wall if incorrectly fitted.

(Fixings are not supplied with the pack as they vary according to the type of walls you have. If you are unsure, ask an expert).

Hang the cabinet onto the wall brackets **P**, ensuring that the hooks are fully engaged behind the brackets, as shown. (Pulling the fitted cabinet towards yourself, whilst supporting its weight, will confirm this has been achieved).

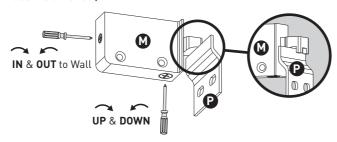


Ensure the front face of the unit is vertical by using a spirit level.

## **JOINING & LEVELLING**

Mark 20mm on a 3mm dia. drill bit with masking tape. Drill between the 2 holes drilled for the hinges, through one cabinet side into the next, stopping when you reach the marker.


Join the cabinets together with 2 x 🕞 screws.

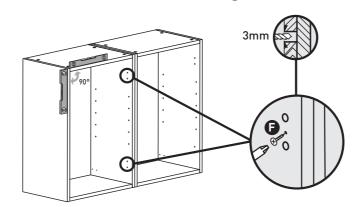

#### **SHELF FITTING**

Push shelf support into chosen shelf position holes, 4 per shelf.

Tilt and slide in shelf.



# **SMALL DRAWER FITTING**

For fitting of drawers, refer to the assembly guide within the drawer pack.

## **NOTES:**